
AR68.20-P-2310GH	Removing and installing cover at gearshift lever	4.2.97

MODEL 163.113 /136 /154 /172 /174 up to 31.8.01

1 Plastic frame
2 Covering in front stowage compartment
3 Center console insert
4 Cover
5 Connectors
S21 Center console switch group

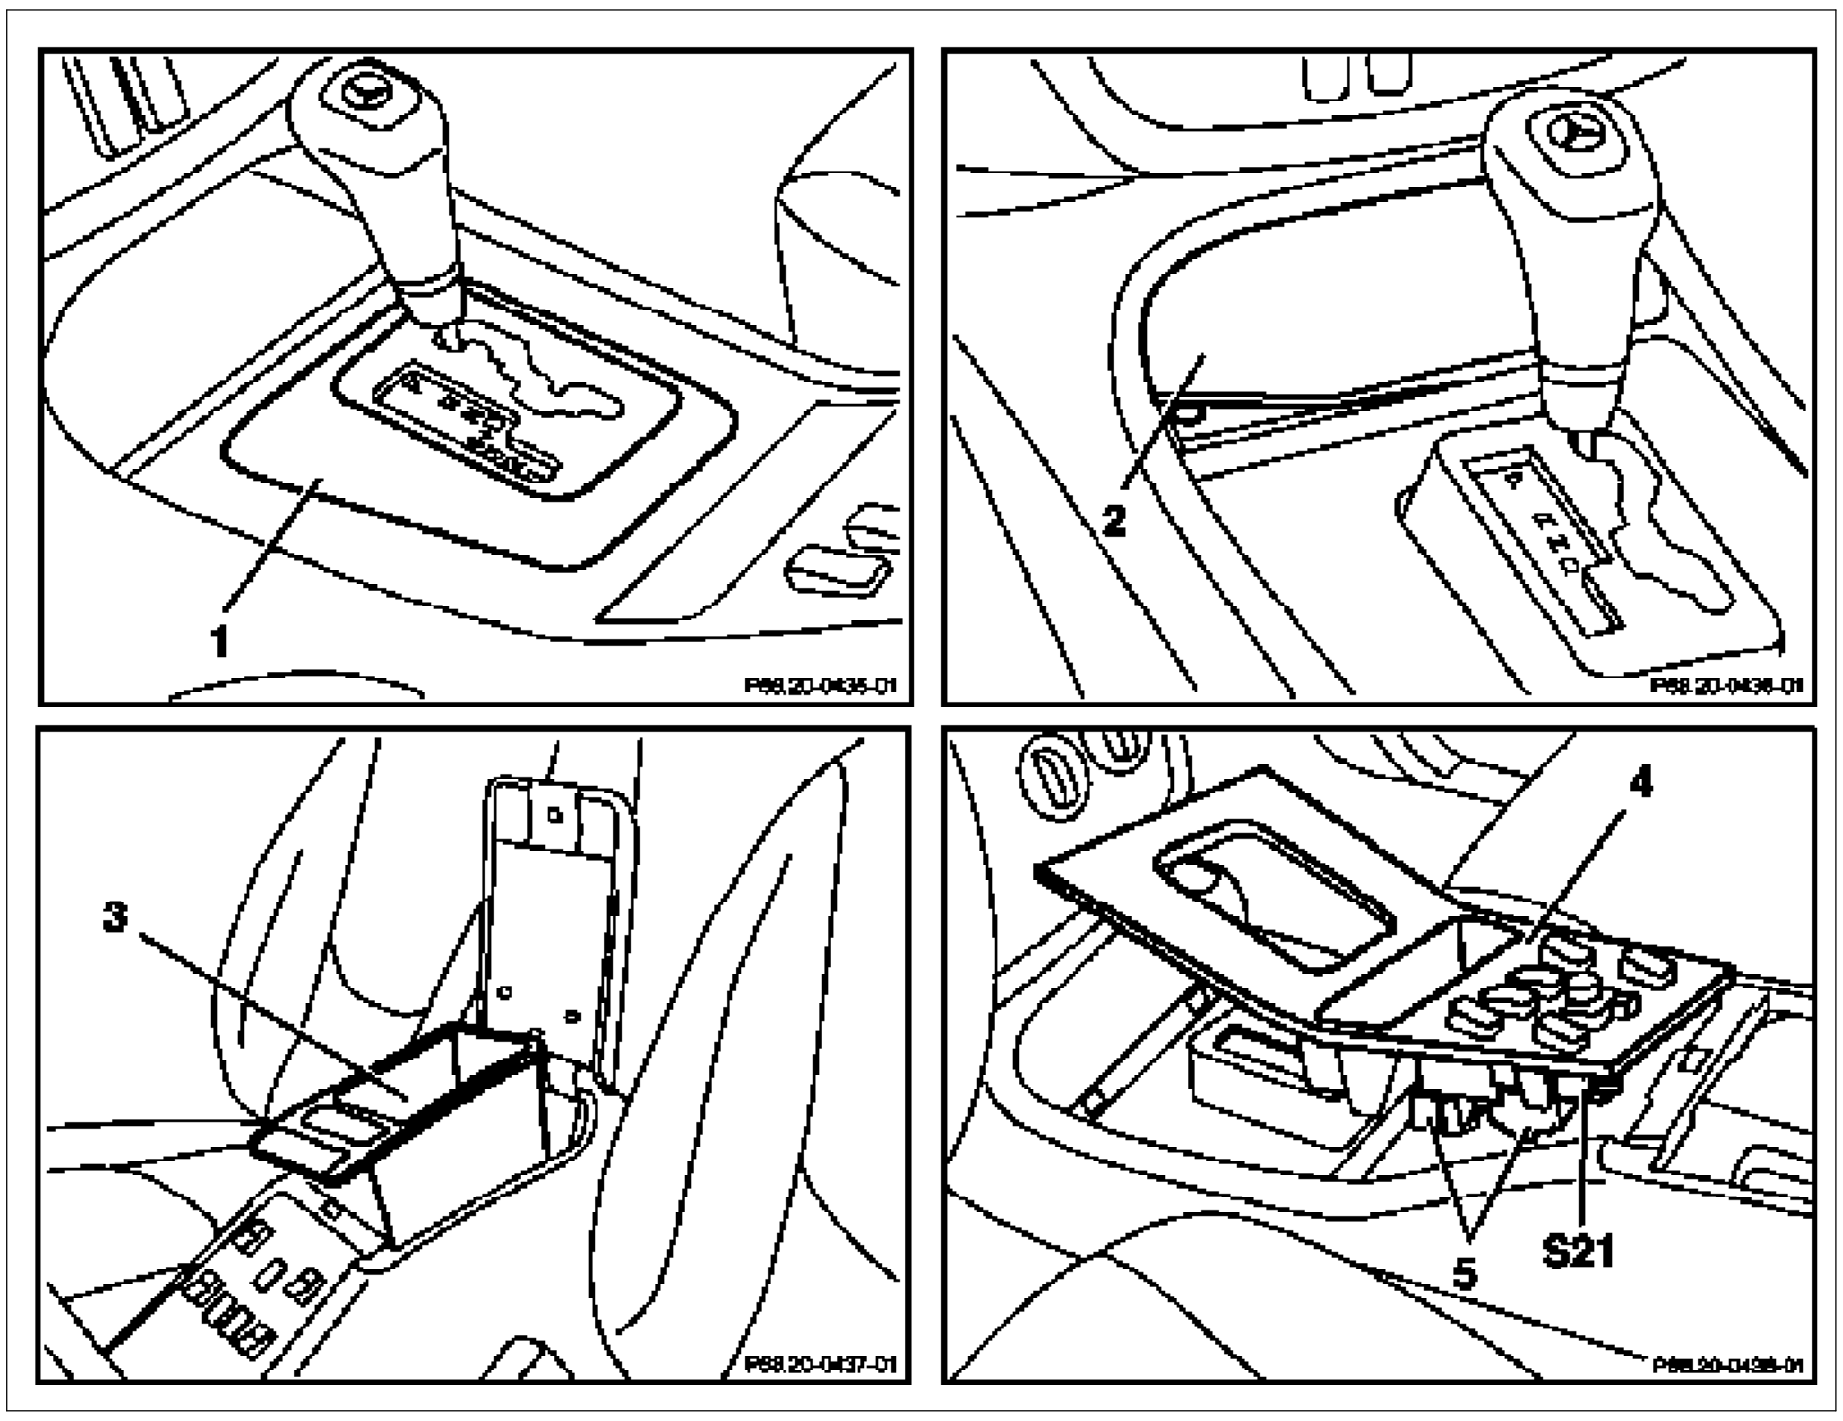

P68.20-0434-06

Operation no. of operation texts or standard texts and flat rates

Range	Op. no.	Operation text
P	683450	REMOVING AND INSTALLING COVER FOR SHIFT LEVER
P	683455	REPLACING COVER FOR GEARSHIFT LEVER

	Remove/install		
1	Remove plastic frame (1) upward		*115589035900
2	Remove covering in stowage compartment (2)	Fastened with pin.	
3	Remove center console insert (3)	Remove screws (2 each) from insert floor	
4	Press cover (4) out of catch in center console at rear and sides with long wedge		*115589035900
5	Disconnect connectors (5) from center console switch group (S21)		
6	Install in the reverse order		



115 589 03 59 00

Long wedge

